



Here is the included lights. Two (2) total.



Take your factory connector and wire in black to white and white to black.

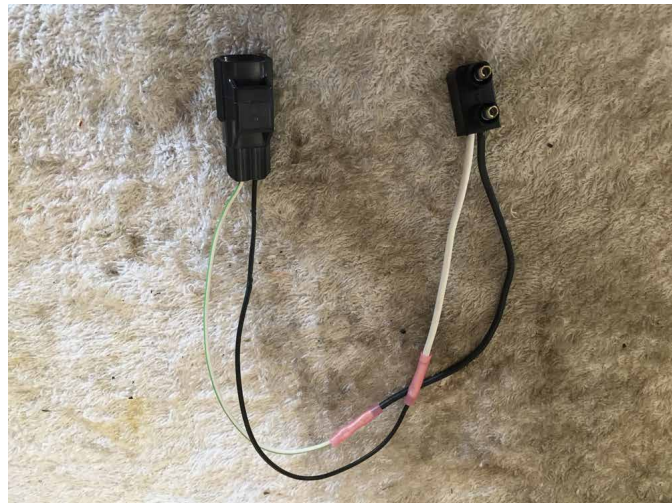

Install included bracket

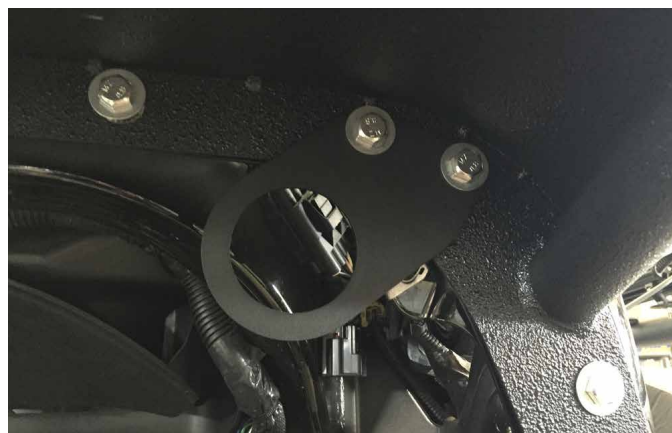

Feed spliced wires into light mount through existing hole.



Install light mount into bracket by inserting it through the front. Plug in connector. Install amber marker light.



Finished product